



PVS Sensors Inc.
 PO Box 100
 2810 Blue Ridge Blvd
 West Union, SC 29696

Toll Free: 1-800-988-1276
 Fax: 864-638-0005
 Web Site: www.pvssensors.com
 Email: sales@pvssensors.com

 
Installation Instructions for PMA/PMF Pressure Switches

Adjusting the Set Point:

(Switch is factory set at the lowest value of the adjustment range)

- Insert a 5/64" allen key into hole for the adjustment screw.
- For Flying Leads (FL) and Spade (SP) models remove adjustment plug at top and insert allen key
- For Integral Deutsch, insert allen key through adjustment hole
- For adjustment, turn the screw clockwise to increase the set point or counter-clockwise to decrease until desired set point is reached

Contact	Spade (Fig 1)	Integral Deutsch (Fig 2)	Flying Leads (Fig 3)
Common	C	Pin 1	Black
N. Closed	NC	Pin 2	Green
N. Open	NO	Pin 2	Red



OPERATING CHARACTERISTICS

	ADJUSTMENT RANGE (PSI)	AVERAGE DIFFERENTIAL (PSI)	PROOF PRESSURE (PSI)
PMA - 1	2 - 20	Less than 10% of Actuation Point	350
PMA - 2	15 - 100		350
PMA - 3	50 - 150		350